



AV Party Rentals

EVERYTHING FROM TEASPOONS TO TENTS - SINCE 1968

Cotton Candy Machine Instructions



Controls and Their Functions

Power Switch – Supplies power to the machine without turning on any components. Also acts as a “Master” on/off switch. Turning the power switch off will turn motor and heat off. (Power Switch is located on the front or side of the machine)

Candy (Heat) Switch – Turns motor and heat cycle on. Turning this switch “off” when finished making cotton candy allows the machine to start its cooling cycle. **Note:** Motor will continue turning during the cooling cycle, and will stop turning after 45-60 seconds. (Candy Switch is located on the front of the machine)

Operating Instruction

1. With the **CANDY (HEAT) SWITCH** “off”, turn the **POWER SWITCH** “on”. The spinner head will not start to rotate.
2. With the spinner head stopped, pour sugar into the spinner head. Fill to about the 90% level, DO NOT over-fill.
3. Turn the **CANDY (HEAT) SWITCH** to “on”. The spinner head will rotate and heat, after about 45 seconds the machine will start to make cotton candy.
4. When the spinner head is empty, or to stop making cotton candy, turn the **CANDY (HEAT) SWITCH** “off”. The cooling cycle will start. When the cooling cycle completes, the spinner head will stop rotating. When the spinner head is stopped; re-fill with sugar, turn the **CANDY (HEAT) SWITCH** “on”, and continue to make cotton candy.

Visit Our Large Showroom:

23800 Newhall Avenue
Newhall, Ca. 91321

Visit us On The Web:

www.AVParty.com



Phone: 661-259-2151

818-362-8389

Email:

client.sales@avparty.com



AV Party Rentals

EVERYTHING FROM TEASPOONS TO TENTS - SINCE 1968

Making Floss

CAUTION




Keep hands away from spinning head!

Pick a cone; if it sticks in the stack of cones, twist it off the stack.

Hold an inch or two of the pointed end of the cone between two fingers and a thumb. With a light flicking action, roll cone in the web of floss building up in the pan. Lift the cone up with the ring of floss attached and rotate the cone to wrap the floss. **DO NOT** roll floss while the cone is inside the pan. This will pack the floss too tightly.

If the floss fails to stick to the cone, pass the cone near the spinner head to pick up a "starter" of melted sugar. Lift the cone out of the pan and wrap the floss with a "figure eight" movement of the hand. This leaves giant pockets and makes the final product appear larger. Make sure room humidity is not too high, or product will be "heavy".

1. Grip cone as shown.

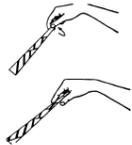

2. Break into web of floss with the cone.



3. Wind the sugar onto the cone.



4. Lift web of floss from the pan and roll onto the cone.



5.




6.



7.



8.

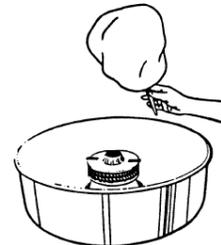

- Do NOT put hands or objects in rotating spinner head!
- Do NOT fill spinner head with sugar while it is rotating!
- Operator should ALWAYS wear eye protection!
- Use floss cone to collect cotton candy.

Visit Our Large Showroom:

23800 Newhall Avenue
Newhall, Ca. 91321

Visit us On The Web:

www.AVParty.com



Phone: 661-259-2151

818-362-8389

Email:

client.sales@avparty.com




AV Party Rentals

EVERYTHING FROM TEASPOONS TO TENTS - SINCE 1968

Floater Adjustment:

In operation, the floss will collect on the FLOSS STABILIZER (Plastic Net). If the floss collects "low" on the stabilizer, twist the front (leading) edge of the leather floaters down. You get more lift and the floss will collect higher. Form leather floaters as shown. This creates a lifting action to float the floss higher on the outside wall of the floss pan

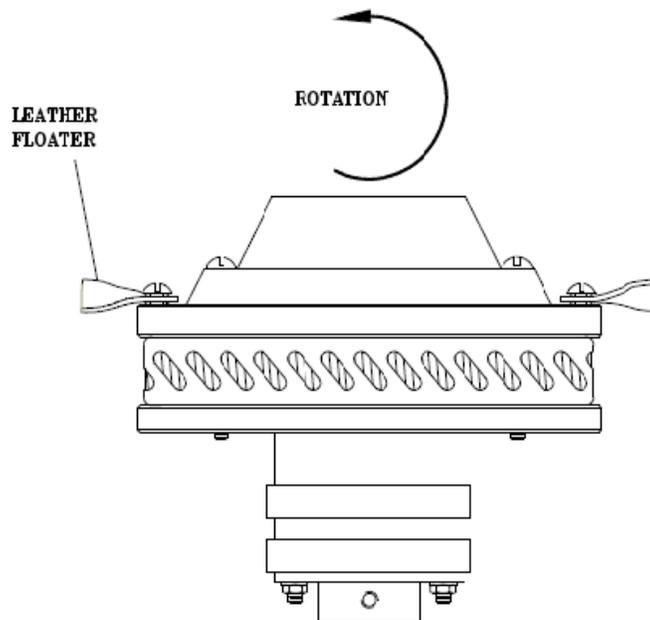

Visit Our Large Showroom:
23800 Newhall Avenue
Newhall, Ca. 91321

Visit us On The Web:
www.AVParty.com



Phone: 661-259-2151
818-362-8389

Email:
client.sales@avparty.com